


QUICK START

Please refer to the instruction booklet for more detailed information




IRONING WITHOUT STEAM

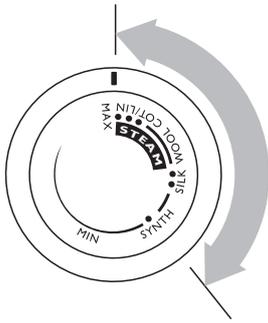


Turn the temperature control to the desired heat setting.



Turn the steam control anticlockwise to the OFF position. If you don't do this, water can drip from the soleplate during ironing.

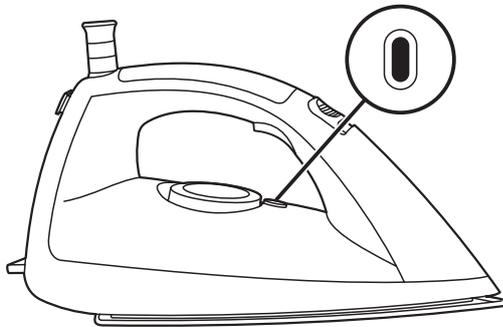

Wait until the temperature indicator light goes **OUT**. Your iron is now at the correct temperature to use.

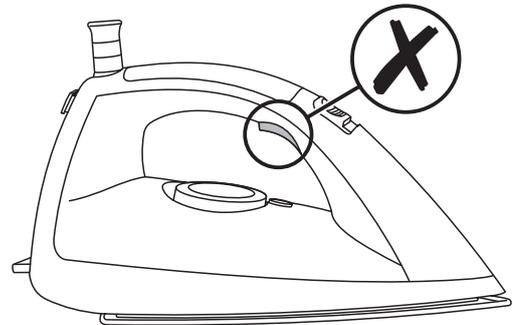

Iron **WITHOUT** pressing the steam trigger.

TROUBLESHOOTING

No steam	<ul style="list-style-type: none">Check that there is water in the tankCheck that the water tank is fitted correctly (e.g. is the red tab visible?)Check that the steam control is not set to OFFCheck that the iron is up to temperature (the temperature indicator light is OUT)
Water drips from the soleplate during steam ironing	<ul style="list-style-type: none">Check that the temperature control is between ●● and MAXCheck that the iron is up to temperature (the temperature indicator light is OUT)
Water drips from the soleplate during dry (no steam) ironing	<ul style="list-style-type: none">Check that the steam control is set fully anticlockwise to OFFDon't press the steam trigger during ironing

NEED MORE HELP?



CUSTOMER SERVICES
0161 621 6900



info@pulse-uk.co.uk