



Blue Ice Kettle



Instructions for Use

PLEASE RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE.
These instructions refer to the Breville Blue Ice Kettle JK147

FEATURES



- | | | | |
|---|----------------------------------|---|---|
| 1 | Lid release button | 7 | Easy clean, fast boil 3000W concealed element |
| 2 | Hinged locking lid | 8 | 360° rotational power base with cord storage and cable exit |
| 3 | Spout | 9 | On/Off switch |
| 4 | Filter | | |
| 5 | Crystal clear polycarbonate body | | |
| 6 | Blue illumination on boil | | |

BEFORE USING YOUR KETTLE

- 1 Remove any packaging and promotional material from the kettle and position on a dry, level, secure work surface away from the edge.
- 2 Before connecting to a power source, make sure your mains supply voltage is the same as the one indicated on the base of this appliance. Connect the plug to a suitable power outlet and ensure that the power cord does not overhang the work surface.
- 3 Remove the kettle from the power base and press the lid release button to open. Fill the kettle to the maximum indication mark on the body and close the lid.
- 4 Place the kettle back onto the power base. Ensure the kettle is not over-filled. Always compare the water level against the maximum water mark, with the kettle positioned on the power base.
- 5 Turn on the kettle by pressing the ON/OFF switch down.

Bring to the boil and then discard the water. Repeat this procedure two more times. This removes any residues that may have remained from the manufacturing process. Remove and rinse the filter before use. See cleaning the filter section.

USING YOUR KETTLE

- 1 With the kettle switched off (ON/OFF switch in the UP position), plug the power base into a suitable power outlet.
- 2 Remove the kettle from the power base before filling with water. Do not fill through the spout.
- 3 Open the lid by pressing the lid release button and fill through the top, observing the capacity markings on the kettle body.
- 4 Fill the kettle with no less than the minimum amount of water and no more than the maximum capacity.

TO ENSURE KETTLE IS NOT OVERFILLED, ALWAYS CHECK THE KETTLE'S WATER LEVEL WITH THE KETTLE POSITIONED ON ITS POWER BASE.

- 5 Push the lid closed and then switch the kettle on by depressing the ON/OFF switch. **Be careful to close the lid correctly to ensure optimum operation.**

When the kettle is switched on, the ON/OFF switch and the body illuminates.

- 6 When the water reaches boiling point, the kettle turns off automatically.

Due to the clear nature of the kettle it will be possible to see the water boiling. This kettle is designed to

turn off automatically at boiling point. (100°C). It may be possible to see the water boiling from around 95°C, and it may give the impression that the kettle has been boiling for too long.

- 7 You may also switch the kettle off manually at any time, by gently lifting the bottom of the ON/OFF switch upwards.

WARNING: If this product is filled above the max. level, hot water may be ejected.

THINK ECO!

Energy Saving Hints and Tips

A Breville kettle, if used correctly, is a very energy efficient device. Why not try some of these energy saving tips?

- Only boil the water you need. Overfilling your kettle by one cup is the equivalent to using an energy saving light bulb for one hour!
- It is not always necessary to re-boil your kettle. For example, one litre of water will still be at 90°C after five minutes - the perfect temperature for a cup of coffee.

CLEANING

- 1 Always unplug from the plug socket and allow to cool fully before cleaning.
- 2 Clean the exterior surface of the kettle with a damp cloth and then polish with a soft dry cloth. Do not use steel wool pads or harsh/abrasive cleaners. This will damage the polycarbonate body.
- 3 **Do not immerse the kettle power base or cordset and plug in water or liquid of any kind.**
- 4 This kettle features a concealed heating element which means it never comes into contact with the water inside the kettle. This hygienic design not only makes cleaning the inside of the kettle much easier, it also keeps cleaning to a minimum.
- 5 The filter inside the kettle needs to be cleaned periodically, how often will vary according to where you live and how often you use your kettle. You should clean it whenever there are any noticeable deposits left on the filter and especially if the rate of pouring starts to reduce.
- 6 Although the kettle is designed for the element to remain scale free, in hard water areas, scale may still build up on the base. Therefore it is very important that you descale regularly using a proprietary descaler. Not doing so will spoil the appearance and efficiency of the kettle and could result in failure of the appliance. Not descaling as advised could invalidate your guarantee.

Always follow the manufacturers instructions carefully when descaling the kettle.

CLEANING THE FILTER

Removing/Refitting the Filter

Important: Before removing or refitting the filter, switch the kettle off and empty it. Allow to cool completely then unplug the power base.

To Remove the Filter

- **Ensure the kettle has cooled fully and is empty.**
Paying close attention to how the filter is installed, gently unclip.

To Clean the Filter

- Rinse the filter under a tap whilst brushing with a soft brush. In hard water areas it may be necessary to descale with a descaling agent.

Use a proprietary descaler, following the manufacturer's instructions carefully.

To Refit the Filter

- Make sure that your hands are clean and free from soap, cream or anything which might taint the water.
- Place kettle on the worktop and locate the filter into the spout as follows:

Holding the top of the filter, clip in bottom first, then top.

Note: To prevent damage to the filter, avoid pressing the mesh.

REPLACEMENT PARTS

For replacement parts, phone our Customer Service Department on 0161 621 6900. They will give you up to date prices, inclusive of VAT and Postage and Packaging.

You may then: Send a cheque or postal order for the correct amount, made payable to Pulse Home Products Ltd, with one of the order forms printed below (or a copy) to our Customer Service Department.

PLEASE COMPLETE THIS FORM IN BLOCK CAPITALS

Your name: _____

Your address: _____

Postcode: _____

Product: JK147

| Part No: | Description | Quantity |
|----------|-------------|----------|
|----------|-------------|----------|

| | | |
|-------|---------------|--|
| 91212 | Kettle filter | |
|-------|---------------|--|

I enclose a cheque for £ _____ in full payment.

IMPORTANT INSTRUCTIONS

ALWAYS

- ✓ **Always** ensure hands are dry before handling the plug or switching on the kettle.
- ✓ **Always** use the kettle on a secure, dry level surface.
- ✓ **Always** store excess portion of the power cord in the storage compartment of the base unit.
- ✓ **Always** carry out regular checks of the supply cord to ensure no damage is evident. Should there be any signs that the cord is damaged in the slightest degree, the entire appliance should be returned to the Customer Service Department.
- ✓ **Always** return the kettle after a malfunction, or if it has been damaged in any manner to the Customer Service Department.
- ✓ **Always** exercise caution when carrying the kettle full of boiling water and when pouring.
- ✓ **Always** Avoid excessive tilting of the kettle after filling.
- ✓ **Always** beware of steam being emitted from the spout or lid especially during refilling.
- ✓ **Always** ensure kettle is switched off before removing from the power base.
- ✓ **Always** unplug kettle from socket after use and before cleaning.
- ✓ **Always** allow the kettle to cool before cleaning and storing.

Caution: This appliance generates heat during use. Proper precautions must be taken to prevent the risk of burns, scalds, fires or other damage to persons or property caused by touching the exterior whilst in use or during cooling.

NEVER

- ✗ **Never** touch hot surfaces.
- ✗ **Never** use this appliance outdoors.
- ✗ **Never** use this appliance for other than intended use. This appliance is for household use only.
- ✗ **Never** use the kettle to heat anything other than water.
- ✗ **Never** immerse any part of the kettle, power base or cordset and plug, in water or any other liquid to protect against electrical hazards.
- ✗ **Never** use harsh, abrasive or caustic cleaners to clean this appliance.
- ✗ **Never** allow children to use this appliance. Close supervision is necessary when the appliance is near children.
- ✗ **Never** leave appliance unattended when in use.
- ✗ **Never** open the lid during the boiling cycle.
- ✗ **Never** fill above 'max' indication as hot water may be ejected.
- ✗ **Never** operate kettle if water is below 'min' level.
- ✗ **Never** allow kettle to boil dry. If kettle does boil dry, allow to cool, unplug and refill with cold water.
- ✗ **Never** fill kettle when positioned on power base.
- ✗ **Never** let cord hang over the edge of a table or counter, touch hot surfaces or become knotted.
- ✗ **Never** place this appliance on or near a hot gas or electric burner or where it could touch a heated oven or microwave oven.
- ✗ **Never** use a power base other than the one supplied with this kettle.
- ✗ **Never** insert any object into slots or holes of the kettle.
- ✗ **Never** operate any appliance with a damaged cord or plug or after an appliance malfunction or if it has been damaged in any manner.

CONNECTION TO THE MAINS SUPPLY

When using electrical appliances, basic safety precautions should always be followed.

WARNING: THIS APPLIANCE MUST BE EARTHED

If this appliance is fitted with a rewirable BS1363, 13 amp plug, the fuse should be rated at 13 amps and be ASTA approved to BS1362. However if the plug is unsuitable, it should be dismantled and removed from the supply cord and an appropriate plug fitted as detailed below.

If this appliance is fitted with a moulded BS1363 13 amp plug, the fuse should be rated at 13 amps and be ASTA approved to BS1362. If the fuse in a non-rewirable plug needs to be changed, the fuse cover must be refitted. The appliance must not be used without the fuse cover fitted.

In the event of the plug being unsuitable, it should be changed and an appropriate plug fitted as detailed below. If you remove the plug it must not be connected to a 13 amp socket and the plug must be disposed of immediately.

As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:


The wires of the mains lead are coloured in accordance with the following code: **GREEN & YELLOW = EARTH** **BLUE = NEUTRAL** **BROWN = LIVE**

The wire which is coloured **GREEN & YELLOW** must be connected to the terminal in your plug which is marked with an E or by the EARTH SYMBOL  or coloured **GREEN or GREEN & YELLOW**.

The wire coloured **BLUE** is the **NEUTRAL** and must be connected to the terminal in your plug which is marked **N** or coloured **BLACK**.

The wire coloured **BROWN** is the **LIVE** and must be connected to the terminal in your plug which is marked **L** or coloured **RED**.

If any other plug is used, a 13 amp fuse must be fitted either in the plug or adaptor or at the distributor board.

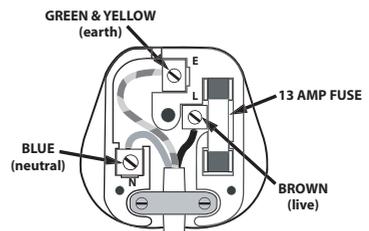

AFTERSALES SERVICE

These appliances are built to the very highest of standards. There are no user-serviceable parts. Follow these steps if the unit fails to operate:

- 1 Check instructions have been followed correctly.
- 2 Check fuse has not blown.
- 3 Check mains supply is functional.

If the appliance will not operate, return the appliance to the place it was purchased for a replacement. To return the appliance to the Customer Service Department, follow the steps below:

- 1 Pack it carefully (preferably in the original carton). Ensure unit is clean.
- 2 Enclose your name and address and quote model number JK147 on all correspondence.
- 3 Give the reason why you are returning it.
- 4 If within the guarantee period, state when and where it was purchased and include proof of purchase (e.g. till receipt).
- 5 Send it to our Customer Service Department at the address below:

***Customer Service Department
Pulse Home Products Limited
Middleton Road
Royton
Oldham
OL2 5LN, UK.***

***Telephone: 0161 621 6900 Fax: 0161 626 0391
e-mail: info@pulse-uk.co.uk***

GUARANTEE

This product is guaranteed for a period of 1 year from the date of purchase against mechanical and electrical defects.

This guarantee is only valid if the appliance is used solely for domestic purposes in accordance with the instructions provided, that it is not connected to an unsuitable electricity supply, dismantled or interfered with in any way or damaged through misuse. Under this guarantee we undertake to repair or replace free of charge any parts found to be defective.

Nothing in this guarantee or the instructions relating to the product excludes, restricts or otherwise affects your statutory rights.

In line with our policy of continuous development, we reserve the right to change this product, packaging and documentation without notice.

This product is manufactured to comply with the radio interference requirements of **EEC** directive 93/68 EEC.



Vine Mill, Middleton Road, Royton, Oldham, OL2 5LN, UK.
www.breville.co.uk

Breville is a registered trademark of Pulse Home Products Limited
© Pulse Home Products Limited



92540-0
JK147_Iss1_02/07