 




TOASTER









MODEL TT30/TT33

TOASTER



CONTENTS

4	Congratulations
5	About your toaster
6	Know your Breville Café Series 2 Slice Toaster (TT30)
7	Know your Breville Café Series 4 Slice Toaster (TT33)
9	Operating your Breville Café Series Toaster
11	Care and cleaning
13	Breville recommends safety first
14	Important instructions
15	Connection to the mains supply
16	Aftersales service / Guarantee

        




Congratulations

 on the purchase of your new Breville Café Series Toaster










Delivers quality, style and superior performance capturing the essence of the commercial kitchen, your Café Series Toaster adds style and innovation to your kitchen.

We would just like to say thank you and...

enjoy.

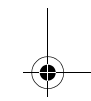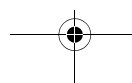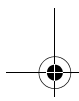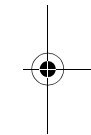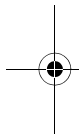

KNOW YOUR BREVILLE CAFÈ SERIES 2 SLICE TOASTER (TT30)

High lift lever

Allows you to remove crumpets, muffins and small pieces of toast safely without burning your fingers.

Electronic browning control

variable toast settings from 1-6 with additional frozen setting; allows you to toast your bread to the desired colour, consistently.

Removable crumb tray

Push to release the large crumb tray from underneath your toaster for easy cleaning.



Extra wide & deep bread slots

Enables you to toast a large variety of breads - regardless of thickness

Self centering bread slots

Whether you are toasting thick or thin bread, your bread will always be held in the centre of the slot to ensure even toasting.


Crumpet Setting










This cooks crumpets to perfection. Specifically designed crumpet feature emits extra heat from the centre element, to cook the top of your crumpet perfectly, without burning the bottom.

Cancel button

Immediately interrupts any toasting cycle and pops the toast up.

KNOW YOUR BREVILLE CAFÈ SERIES 4 SLICE TOASTER (TT33)

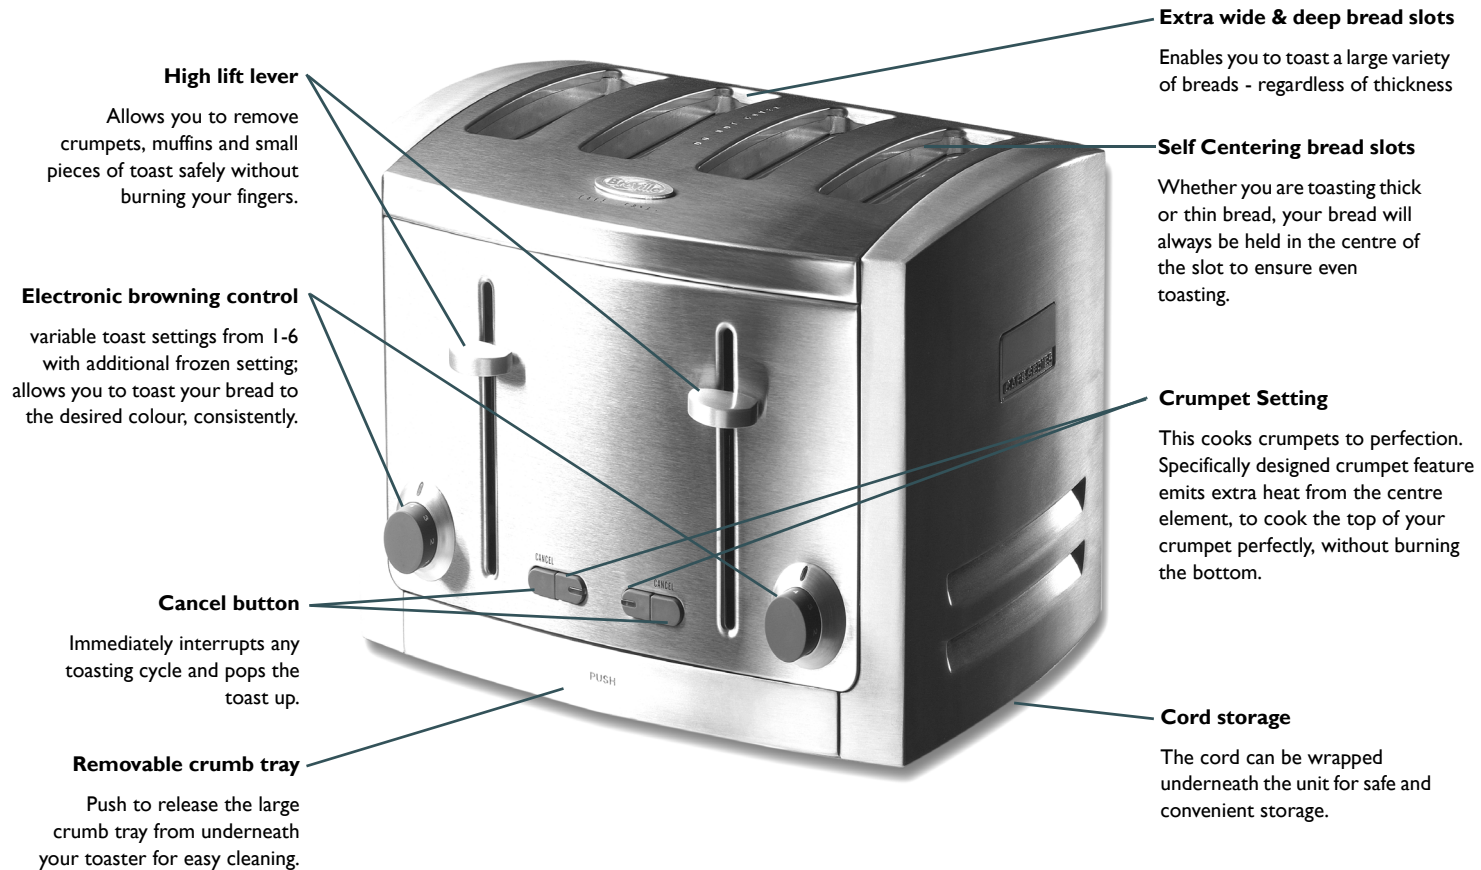

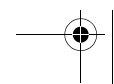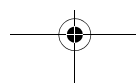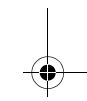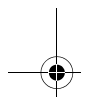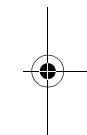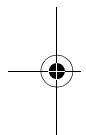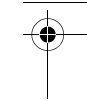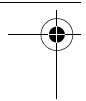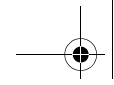

Operating

OPERATING YOUR BREVILLE CAFÉ SERIES TOASTER

BEFORE FIRST USE

Remove any promotional material attached to your toaster.

OPERATION OF YOUR TOASTER

- Insert the plug into a suitable mains supply.
- Position the bread in the bread slot.
- Select the desired colour setting on the electronic browning control. When using the toaster for the first time we suggest that you set the variable browning control to 3.
- Push the toasting lever down to commence the toasting cycle.
- When the desired colour setting is achieved, the toaster will automatically turn off and slide the toast up. If you need to remove the toast before the cycle is complete, press the Cancel button. The Cancel button will immediately interrupt the toasting cycle and slide the toast up.
- To remove small pieces of bread such as bagels, crumpets or muffins use the High lift lever to lift the toast above the starting position. This will prevent burning your fingers as you remove the toast.

NOTE: Do not toast stale bread, rice crackers or similar on a high setting as they may catch fire.

TOASTING FROZEN BREAD

Place the bread into the bread slots and select the frozen setting on the electronic variable browning control dial.

Lower the bread into the toaster by pressing down the lever on the front of the toaster.

NOTE: The toasting cycle can be stopped at any time by pressing the cancel button.


2-SLICE OPERATION (TT33 ONLY)

To toast two slices of bread:



- Insert the bread in the left or right-hand pair of slots.
- Use the browning control and carriage control lever associated with that pair of slots.

TOASTING CRUMPETS








1. Position the crumpets facing inwards, as shown below.

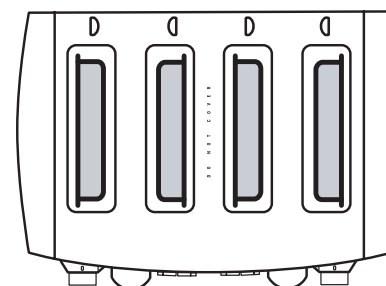

2. Select the desired colour setting on the electronic browning control.
3. Push the toasting lever down to commence the cycle.
4. Then press the crumpet button.
5. To remove your crumpet use the high lift lever to lift the crumpet above the starting position. This will prevent burning your finger as you remove the crumpet.

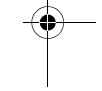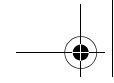

Cleaning

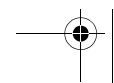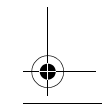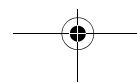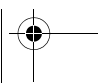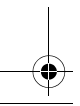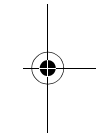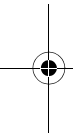



CARE AND CLEANING

Always turn the power OFF and remove the plug from the power outlet after use and before cleaning your toaster.

TO CLEAN THE EXTERIOR.

Wipe exterior with a slightly dampened cloth and polish with a soft dry cloth.

NOTE: DO NOT USE METAL SCOURERS OR ABRASIVES AS THIS MAY SCRATCH THE EXTERIOR SURFACE.






REMOVABLE CRUMB TRAY







To remove the crumbs, simply push and slide out the tray, empty and place it back in the toaster.

CAUTION: NEVER IMMERSE THE MAIN UNIT, CORD SET OR PLUG IN WATER OR ALLOW MOISTURE TO COME IN CONTACT WITH THESE PARTS.

TO CLEAN THE TOASTER INTERIOR

Clean inside the toaster regularly. To do this, unplug the appliance, turn it upside down over the sink and gently shake all the crumbs out.

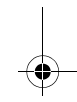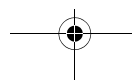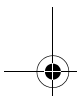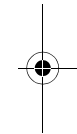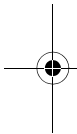

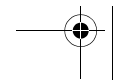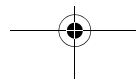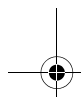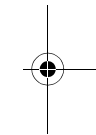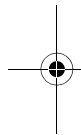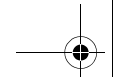








BREVILLE RECOMMENDS SAFETY FIRST

We at Breville are very safety conscious. We design and manufacture consumer products with the safety of you, our valued customer foremost in mind. In addition we ask that you exercise a degree of care when using any electrical appliance and adhere to the following precautions:

IMPORTANT SAFEGUARDS FOR YOUR CAFÈ SERIES TOASTER

This appliance has been designed specifically for the purpose of toasting breads, bagels and crumpets only.

- Always use the appliance on a dry, level surface.
- Never immerse the main unit, cord set or plug in water, or allow moisture to come in contact with these parts.
- Keep clear of walls, curtains and other heat or steam sensitive materials. Minimum 200mm distance.
- The appliance is not intended for use by young children or infirm persons without supervision.
- Young children should be supervised to ensure that they do not play with the appliance.
- Do not let the cord hang over the edge of a table or counter, touch hot surfaces or become knotted.
- Do not place on or near a hot gas burner, electric element, or in a heated oven.
- This appliance is intended for household use only. Do not use this appliance for other than it's intended use.
- Do not use outdoors.
- Do not operate the toaster on an inclined surface.
- Do not move the toaster while it is switched on.
- Always turn the power off at the power outlet and then remove the plug from the power outlet before attempting to move the appliance, when the appliance is not in use and before cleaning or storing.
- Regularly inspect the power cord, plug and actual appliance for any damage. If found damaged in any way, immediately cease use of the appliance and return unit to the Breville Customer Service Department for examination, replacement or repair.

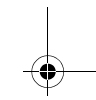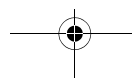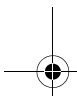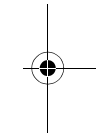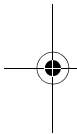

IMPORTANT INSTRUCTIONS

Please read these instructions before operating this appliance and retain for future use.

ALWAYS

- ✓ **Always** ensure hands are dry before handling the plug or switching on the toaster.
- ✓ **Always** use the toaster on a secure, dry, level surface.
- ✓ **Always** allow adequate air space above and on all sides for air circulation. Do not allow the appliance to touch curtains, wallcoverings, clothing, dishtowels or other flammable materials during use. Do not use under cupboards or curtains.
- ✓ **Caution** is required on surfaces where heat may cause a problem - an insulated heat pad is recommended.
- ✓ **Always** use the toaster with the crumb tray in place.
- ✓ **Always** regularly clean the crumb tray. Do not allow crumbs to build up.
- ✓ **Always** unplug from the socket when not in use and before cleaning.
- ✓ **Always** allow the toaster to cool before cleaning and storing.
- ✓ **Always** carry out regular checks of the supply cord to ensure no damage is evident. Should there be any signs that the cord is damaged in the slightest degree, the entire appliance should be returned to the Customer Service Department.
- ✓ **Always** return the toaster after a malfunction, or if it has been damaged in any manner to the Customer Service Department for examination, repair or adjustment as special purpose tools are required.

CAUTION: THIS APPLIANCE GENERATES HEAT DURING USE. PROPER PRECAUTIONS MUST BE TAKEN TO PREVENT THE RISK OF BURNS, SCALDS, FIRES OR OTHER DAMAGE TO PERSONS OR PROPERTY CAUSED BY TOUCHING THE EXTERIOR WHILST IN USE OR DURING COOLING.

NEVER

- ✗ **Never** touch hot surfaces.
- ✗ **Never** use this appliance outdoors.
- ✗ **Never** use this appliance for other than its intended use. This appliance is for household use only.
- ✗ **Never** allow children to use this appliance. Close supervision is necessary when the appliance is near children.
- ✗ **Never** leave the appliance unattended when in use as the **bread may burn**.
- ✗ **Never** let the cord hang over the edge of a table or counter, touch hot surfaces or become knotted.
- ✗ **Never** place this appliance on or near a hot gas or electric burner or where it could touch a heated oven or microwave oven.
- ✗ **Never** use this appliance with any foodstuff containing sugar or products containing jam or preserves.
- ✗ **Never** immerse any part of the toaster, or cordset and plug in water or any other liquid to protect against electrical hazards.
- ✗ **Never** use harsh, abrasive or caustic cleaners to clean this appliance.
- ✗ **Never** operate the appliance with a damaged cord or plug, after an appliance malfunction or if it has been damaged in any manner.

WARNING: NEVER ATTEMPT TO EXTRACT JAMMED TOAST, MUFFINS, BAGELS OR ANY OTHER ITEM WITH A KNIFE OR ANY OTHER OBJECT, AS CONTACT WITH LIVE ELEMENTS COULD RESULT IN AN ELECTRIC SHOCK. ALLOW THE APPLIANCE TO COOL, UNPLUG AND CAREFULLY REMOVE THE BREAD.

CONNECTION TO THE MAINS SUPPLY

When using electrical appliances, basic safety precautions should always be followed.

WARNING: THIS APPLIANCE MUST BE EARTHED.


If this appliance is fitted with a rewirable BS1363, 13 amp plug, the fuse should be rated at 13 amps and be ASTA approved to BS1362. However if the plug is unsuitable, it should be dismantled and removed from the supply cord and an appropriate plug fitted.

If this appliance is fitted with a moulded BS1363 13 amp plug, the fuse should be rated at 13 amps and be ASTA approved to BS1362. If the fuse in a non-rewirable plug needs to be changed, the fuse cover must be refitted. The appliance must not be used without the fuse cover fitted.

In the event of the plug being unsuitable, it should be changed and an appropriate plug fitted. If you remove the plug it must not be connected to a 13 amp socket and the plug must be disposed of immediately.

As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

NOTE: The wires of the mains lead are coloured in accordance with the following code:
GREEN & YELLOW = EARTH
BLUE = NEUTRAL
BROWN = LIVE

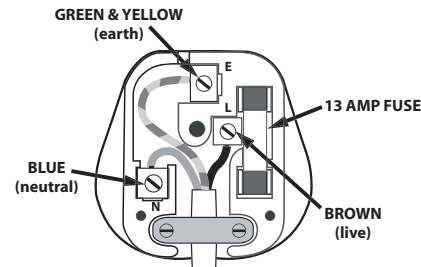

- The wire which is coloured **GREEN & YELLOW** must be connected to the terminal in your plug which is marked with an **E** or by the **EARTH SYMBOL** or coloured **GREEN** or **GREEN & YELLOW**.
- The wire coloured **BLUE** is the **NEUTRAL** and must be connected to the terminal in your plug which is marked **N** or coloured **BLACK**.
- The wire coloured **BROWN** is the **LIVE** and must be connected to the terminal in your plug which is marked **L** or coloured **RED**.
- If any other plug is used, a 13 amp fuse must be fitted either in the plug or adaptor or at the distributor board.

AFTERSALES SERVICE

These appliances are built to the very highest of standards. There are no user serviceable parts. Follow these steps if the unit fails to operate:

- 1. Check instructions have been followed correctly.**
- 2. Check fuse has not blown.**
- 3. Check mains supply is functional.**

If the appliance will still not operate return the appliance to the place it was purchased for a replacement.

To return the appliance to the Customer Service Department, follow the steps below:

- 1. Pack it carefully, preferably in the original carton. Ensure the unit is clean.**
- 2. Enclose your name and address and quote Model TT30/TT33 in all correspondence.**
- 3. Give the reason you are returning it.**
- 4. If within the guarantee period, state when and where it was purchased and include proof of purchase (e.g. till receipt).**

- 5. Send it to our Customer Service Department at the address below:**

Customer Service Department
Pulse Home Products Limited
Middleton Road, Royton,
Oldham, OL2 5LN, UK.
Telephone 0161 621 6900
Fax: 0161 626 0391
Email: info@pulse-uk.co.uk

GUARANTEE

This product is guaranteed for a period of 1 year from the date of purchase against mechanical and electrical defects.

This guarantee is only valid if the appliance is used solely for domestic purposes in accordance with the instructions provided, that is not connected to an unsuitable electricity supply, dismantled or interfered with in any way or damaged through mis-use. Under this guarantee we undertake to repair or replace free of charge any parts found to be defective.

Nothing in this Guarantee or the instructions relating to your product excludes, restricts or otherwise affects your statutory rights.

In line with our policy of continuous development, we reserve the right to change this product, packaging and documentation without notice.

This product is manufactured to comply with the radio interference requirements of EEC directive 93/68 EEC.



Vine Mill, Middleton Road,
Royton, Oldham
OL2 5LN, UK.
www.breville.co.uk

Breville is a registered trademark of
Pulse Home Products limited
© Pulse Home Products limited

JCN/FEB05/REV3

92330