

# Breville®



***TECHnique***  
*instructions for use*

## IMPORTANT SAFETY INSTRUCTIONS.

### READ CAREFULLY AND KEEP FOR FUTURE REFERENCE

**This product can be used by children aged 8 years and above, and persons who require supervision, provided:**

- **they are familiar with the hazards associated with the product, and,**
- **they receive instruction by a competent person on how to safely use the product.**

**Children must not play with the product. Cleaning and user maintenance must not be done by children unless they are supervised.**

**Keep the appliance and its cord out of reach of children less than 8 years old when it is switched on or cooling down.**

**The appliance must not be left unattended when it is connected to the mains supply.**

**The appliance must be unplugged from the mains supply socket before filling the water tank with water.**


**Always use the appliance on a stable, secure, dry and level surface. When placing the appliance on its stand, ensure that the surface on which the stand is placed is stable.**

**Do not use the appliance if it has been dropped, if there are any visible signs of damage or if it is leaking.**

**If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.**

- ⚠ Never use this appliance for anything other than its intended use. This appliance is for household use only. Do not use this appliance outdoors.
- ⚠ Always ensure that hands are dry before handling the plug or switching on the appliance.
- ⚠ Do not touch the metal parts of the appliance during use as they may become very hot.
- ⚠ This appliance must not be placed on or near any potentially hot surfaces (such as a gas or electric hob).
- ⚠ Always allow the appliance to cool before cleaning or storing.
- ⚠ Never immerse any part of the appliance or power cord and plug in water or any other liquid.
- ⚠ Never let the power cord hang over the edge of a worktop, touch hot surfaces or become knotted, trapped or pinched.

# features

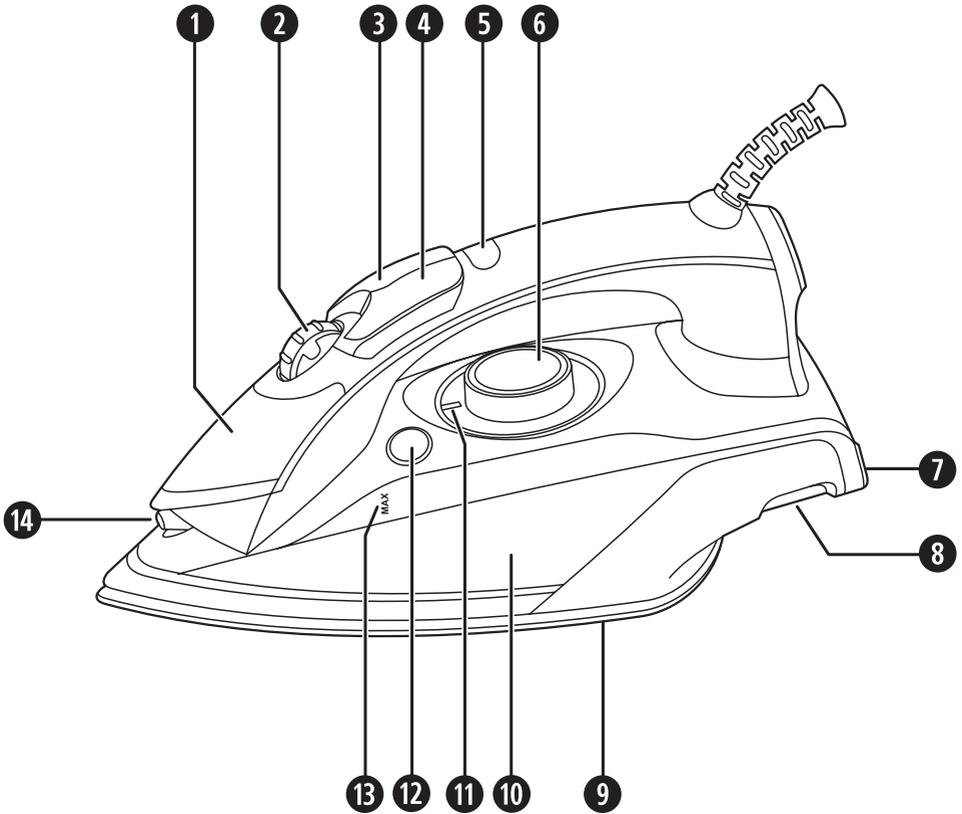

- |                                |                                    |
|--------------------------------|------------------------------------|
| 1. Water tank inlet cover      | 8. Cord wrap                       |
| 2. Steam control               | 9. Ceramic finish soleplate        |
| 3. Shot of steam button        | 10. Illuminated water tank         |
| 4. Spray button                | 11. Temperature control index mark |
| 5. Temperature indicator light | 12. Self clean button              |
| 6. Temperature control         | 13. Water level maximum indicator  |
| 7. Heel rest                   | 14. Spray nozzle                   |

Due to our policy of continuous improvement, the actual product may differ slightly from the one illustrated in these instructions.

**▲ Remove all packaging including any soleplate protection before heating the iron.**

Wipe over the soleplate with a cloth moistened with methylated spirit. Remove the methylated spirit with a damp cloth then dry the soleplate thoroughly.

Fill the water tank and then empty it. This will rinse out any foreign particles remaining in the water tank from the manufacturing process. Never fill your iron by holding it directly under a tap. Always use the measuring cup supplied.


Before connecting your iron to the mains supply, make sure your supply voltage is the same as the one indicated on your iron.

When you first use your iron, there may be a slight odour and it may smoke slightly for the first few minutes of operation. This is quite normal and will disappear.

# filling your iron

**⚠ Never use fabric conditioner, starches or any other chemicals or additives.**

1. Ensure the iron is switched off and unplugged from the mains supply socket.
2. Set the steam control to the no steam position (0).
3. Place the iron on its heel on a flat, stable, dry, heat resistant and level surface and open the water tank inlet cover.
4. Fill the water tank with ordinary tap water. To avoid air locks, tilt the iron slightly while filling it.
5. Don't fill the iron above the water level indicator MAX marking. Check the water level by standing the iron on its heel.
6. When the iron is filled close the water tank inlet cover.

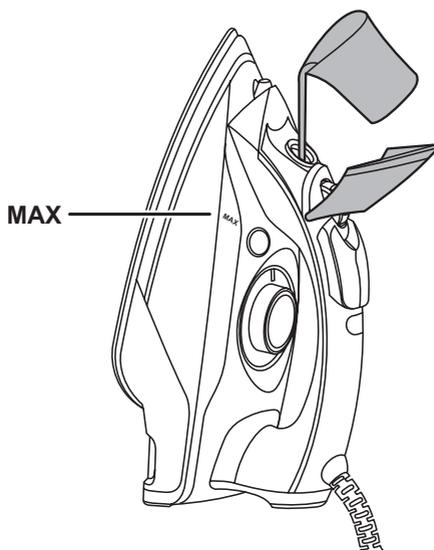

## We recommend that you:

- Start by ironing those items of laundry that require the lowest temperature (e.g. synthetics). Finish by ironing fabrics which respond best to higher temperatures and steam—such as cotton and linen.
- If you iron a fabric made of a blend of fibres set the temperature of your iron to the most delicate fibre.
- Never use the burst of steam button on silks or synthetics.
- When using starch, it should be sprayed onto the reverse side of the fabric and the soleplate cleaned more frequently.
- Do not iron over sharp or hard objects such as buttons, studs or zippers as they will scratch the soleplate of your iron.

## Important

Your iron takes time to heat up and cool down. If you change the temperature setting on your iron, you must give it time to adjust to the new setting.

This is especially important when you change from a high setting to a lower one. It takes your iron longer to cool down than it does to heat up. This is the reason we recommend that you begin ironing at lower temperatures.

If you do need to reduce the temperature of your iron, wait until the temperature indicator light comes on and then goes off again before ironing. This will ensure that your iron has reached the lower temperature and is not too hot for the fabric being ironed.

For example, you have been ironing using the ●●● setting and want to change to the ●● setting:

1. Move the temperature control dial to the ●● setting. Initially, the temperature indicator light will be off because your iron is still at a higher temperature.
2. Wait until the temperature indicator light comes on and then goes out again. Your iron has now cooled to the correct temperature.

# using your iron

## Ironing without steam

If you intend to dry-iron fabrics there is no need to fill the water tank. However, if water is already in the water tank, you don't need to empty it.

1. Set the steam control to the no steam position (0) position.
2. Plug your iron into the mains supply and switch on.
3. Rotate the temperature control until the desired setting is aligned with the temperature control index mark.
4. When the temperature indicator light goes out, your iron is ready to use.

## Steam ironing

**▲ During steam ironing, if you do not allow your iron to reach the selected temperature water may drip from the soleplate.**

It is recommended that for harder to iron fabrics such as cotton and linen, steam should be used when ironing.

When ironing cotton and linen, always select the highest temperature. Steam should never be used on delicate fabrics like nylons, acrylics and synthetics.

1. Fill your iron with water.
2. Plug your iron into the mains supply and switch on.
3. Set the temperature control so it is within the steam range (between ●● and MAX). The hotter your iron, the more steam is generated.
4. When the temperature indicator light goes out your iron is ready to use. The temperature indicator light will turn on and off during ironing as your iron maintains the correct temperature.
5. Adjust the steam control to select the desired steam output.
6. The steam can be shut off at any time by setting the steam control to the no steam (0) position.

## Burst of steam

The temperature control must be set within the ●● and MAX setting. Wait several seconds between each press of the steam button.

Press the shot of steam button whenever you have a stubborn crease that needs extra steam. Steam will burst from the holes in the soleplate of your iron into the fabric.

## Vertical steam ironing

**▲ Never iron garments when they are being worn.**

Your iron can be used for vertical steam ironing curtains, dresses on hangers etc.

1. Fill your iron with water.
2. Plug your iron into the mains supply and switch on.
3. Set the temperature control so it is within the steam range (between ●● and MAX). The hotter your iron, the more steam is generated.
4. When the temperature indicator light goes out, your iron is ready to use.
5. Hold your iron 15cm (6 inches) from the fabric.
6. Press the shot of steam button. The steam will penetrate the fabric removing the creases. To apply more steam press the shot of steam button again.

## Spraying

The spray function will only operate when there is water in the water tank.

1. The water spray can be used to help iron heavy fabrics or difficult areas (collars, pockets, sleeves, creases, etc). It can also be used when ironing delicate fabrics which cannot be steam ironed.
2. Simply press the button as required to produce a spray of water. If the spray is being used for the first time, or if the iron has been standing for some time, you may need to press the spray button a few times before it works correctly.

## Anti-drip feature

When the temperature of your iron is insufficient to create steam, the supply of water is cut off automatically to avoid any drips from the soleplate.

## Anti-scale filter

- Your iron is fitted with a permanent anti-scale filter. This filter is fixed and cannot be removed for cleaning.
- The filter is designed to reduce the build-up of limescale inside your iron. Limescale occurs during steam ironing due to water hardness.
- Water hardness varies from one area to another. The effectiveness of the filter will depend on how 'hard' your water is.

# using your iron

## Dry water tank alert

The water tank illumination will flash when the water tank needs refilling.

## Safety auto shut-off function

**▲ ALWAYS disconnect your iron from the mains supply socket after use. NEVER leave the iron unattended with the Auto Shut-off function in operation.**

Your iron will shut off if it has not been used for 10 minutes when resting on its heel, or after 30 seconds if it is resting on its soleplate. The water tank illumination will flash and your iron will sound a series of beeps. This will be repeated whilst your iron is in auto shut-off mode. To restart your iron, gently move it until the water tank illumination stops flashing.

**▲ Do not use harsh abrasives, chemical cleaners or solvents to clean the exterior of your iron because they will damage the surface.**

## Cleaning the soleplate of your Iron

After each use, allow your iron to completely cool down before wiping the soleplate with a soft damp cloth. If polyester has burnt to the soleplate, iron a damp cotton cloth while your iron is still hot. If necessary, allow your iron to completely cool down then wipe over the soleplate with a soft cloth moistened with methylated spirits. Remove the methylated spirit with a damp cloth. Make sure that the soleplate is completely dry.

## Self-cleaning

**▲ Only press the self-clean button when you want to activate the self cleaning system. Never press the self-clean button when ironing.**

The self-clean function removes scale and impurities. Use the self-clean function once every two weeks. If the water in your area is very hard, the self clean function should be used more frequently.

1. Ensure your iron is switched off and unplugged from the mains supply socket.
2. Set the steam control to the no steam (0) position.
3. Fill your iron with water to the MAX level.
4. Stand your iron on its heel rest, plug in and switch on at the mains supply.
5. Set the temperature control dial to the highest (MAX) setting. Allow your iron to heat up until the temperature indicator light goes out.
6. Unplug your iron and hold it over a sink with the sole-plate facing downwards.
7. Press and hold the self-clean button. Hot water and steam will be ejected from the holes in the soleplate along with any impurities.
8. Release the self-clean button after one minute or when the water tank is empty.
9. Stand your iron on its heel rest, plug it in to the mains supply socket and switch on. When the temperature indicator light goes out, iron an old piece of cloth to allow any remaining water to escape.
10. After use, switch off and unplug your iron from the mains supply and allow it to fully cool. Empty out any remaining water.

# care and cleaning

## Cleaning the Steam Holes

To remove build-up from the steam holes which may affect steam performance, use a cotton wool tip moistened in methylated spirits. Wipe over with a damp cloth.


To clean the exterior of your iron, wipe over with a damp soft cloth and wipe dry. Ensure the soleplate is then dried thoroughly.

## Putting your Iron Away

1. Set the steam control to the no steam position (0).
2. Turn the power off and remove the plug from the power outlet.
3. When the soleplate has cooled, empty remaining water from the tank.

## Storage

1. Open the filling cover and empty any remaining water from your iron by gently shaking it over a sink.
1. After allowing it to fully cool down store your iron standing on its heel rest.
2. Do not store your iron with the soleplate facing down, or in the carton.
3. Do not wrap the cord around the soleplate. The cord can be neatly wrapped around the heel of your iron.

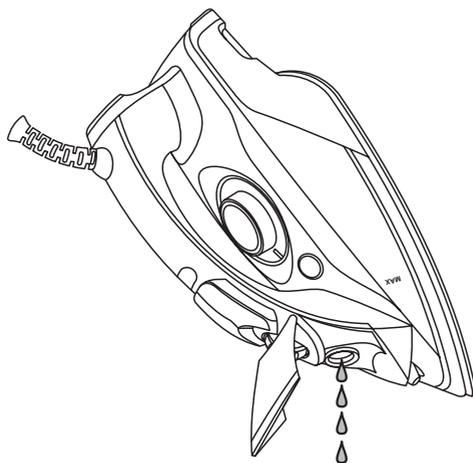

# connection to the mains supply

## ⚠ This appliance must be earthed.

This appliance is fitted with either a moulded or rewirable BS1363, 13 amp plug. The fuse should be rated at 13 amps and be ASTA approved to BS1362.

If the fuse in a moulded plug needs to be changed, the fuse cover must be refitted. The appliance must not be used without the fuse cover fitted.

If the plug is unsuitable, it should be dismantled and removed from the supply cord and an appropriate plug fitted as detailed below. If you remove the plug it must not be connected to a 13 amp socket and the plug must be disposed of immediately.

The wires of the mains lead are coloured in accordance with the following code:


GREEN/YELLOW = EARTH      BLUE = NEUTRAL      BROWN = LIVE

The wire which is coloured GREEN/YELLOW must be connected to the terminal in your plug which is marked with an E or by the earth symbol ( $\perp$ ) or coloured GREEN or GREEN /YELLOW.

The wire which is coloured BLUE must be connected to the terminal in your plug which is marked with the letter N or coloured BLACK.

The wire which is coloured BROWN must be connected to the terminal in your plug which is marked with the letter L or coloured RED.

If any other plug is used, a 13 amp fuse must be fitted either in the plug or adaptor or at the distributor board.

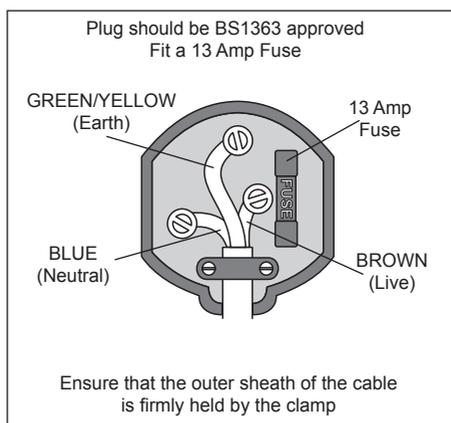

# after sales service

These appliances are built to the very highest of standards. There are no user serviceable parts. Follow these steps if the unit fails to operate:

1. Check the instructions have been followed correctly.
2. Check that the fuse has not blown.
3. Check that the mains supply is functional.

If the appliance will still not operate, return the appliance to the place it was purchased for a replacement. To return the appliance to the Customer Service Department, follow the steps below:

1. Pack it carefully (preferably in the original carton). Ensure the unit is clean.
2. Enclose your name and address and quote the model number on all correspondence.
3. Give the reason why you are returning it.
4. If within the guarantee period, state when and where it was purchased and include proof of purchase (e.g. till receipt).
5. Send it to our Customer Service Department at the address below:

## **Customer Service Department**

**Jarden Consumer Solutions (Europe) Limited**

**Middleton Road**

**Royton**

**Oldham**

**OL2 5LN, UK.**

**Telephone: 0161 621 6900 Fax: 0161 626 0391**

**e-mail: [info@pulse-uk.co.uk](mailto:info@pulse-uk.co.uk)**

Please keep your receipt as this will be required for any claims under this guarantee.

This appliance is guaranteed for 1 year after your purchase as described in this document.

During this guaranteed period, if in the unlikely event the appliance no longer functions due to a design or manufacturing fault, please take it back to the place of purchase, with your till receipt and a copy of this guarantee.

The rights and benefits under this guarantee are additional to your statutory rights, which are not affected by this guarantee. Only Jarden Consumer Solutions (Europe) Limited (“JCS (Europe)”) has the right to change these terms.

JCS (Europe) undertakes within the guarantee period to repair or replace the appliance, or any part of appliance found to be not working properly free of charge provided that:

- you promptly notify the place of purchase or JCS (Europe) of the problem; and
- the appliance has not been altered in any way or subjected to damage, misuse, abuse, repair or alteration by a person other than a person authorised by JCS (Europe).


Faults that occur through, improper use, damage, abuse, use with incorrect voltage, acts of nature, events beyond the control of JCS (Europe), repair or alteration by a person other than a person authorised by JCS (Europe) or failure to follow instructions for use are not covered by this guarantee. Additionally, normal wear and tear, including, but not limited to, minor discoloration and scratches are not covered by this guarantee.

The rights under this guarantee shall only apply to the original purchaser and shall not extend to commercial or communal use.

If your appliance includes a country-specific guarantee or warranty insert please refer to the terms and conditions of such guarantee or warranty in place of this guarantee or contact your local authorized dealer for more information.

Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. E-mail us at [info@pulse-uk.co.uk](mailto:info@pulse-uk.co.uk) for further recycling and WEEE information.

Jarden Consumer Solutions (Europe) Limited  
Middleton Road  
Royton  
Oldham  
OL2 5LN  
UK

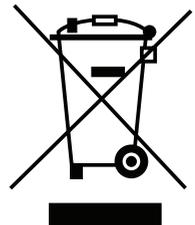



© 2013 Jarden Consumer Solutions (Europe) Limited

All rights reserved. Imported and distributed by Jarden Consumer Solutions (Europe) Limited,  
Royton, Oldham OL2 5LN, United Kingdom.

The product you buy may differ slightly from the one shown on this carton due to continuing product development.

One (1) Year Limited Warranty—see inside for details.

Jarden Consumer Solutions (Europe) Limited is a subsidiary of Jarden Corporation (NYSE: JAH).

Made in PRC

[www.breville.co.uk](http://www.breville.co.uk)