

Breville®

Turn **on** your creativity™



Power Steam
2400W steam iron

Important Safety Information

READ CAREFULLY AND KEEP FOR FUTURE REFERENCE

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

Keep the appliance and its cord out of reach of children less than 8 years old when it is switched on or cooling down.

 
The appliance must not be left unattended when it is connected to the mains supply.

The appliance must be unplugged from the mains supply socket before filling the water tank with water.

Always use the appliance on a stable, secure, dry and level surface. When placing the appliance on its stand, ensure that the surface on which the stand is placed is stable.

Do not use the appliance if it has been dropped, if there are any visible signs of damage or if it is leaking. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

- ⚠ Never use this appliance for anything other than its intended use. This appliance is for household use only. Do not use this appliance outdoors.
- ⚠ Always ensure that hands are dry before handling the plug or switching on the appliance.
- ⚠ Do not touch the metal parts of the appliance during use as they may become very hot.
- ⚠ This appliance must not be placed on or near any potentially hot surfaces (such as a gas or electric hob).
- ⚠ Always allow the appliance to cool before cleaning or storing.
- ⚠ Never immerse any part of the appliance or power cord and plug in water or any other liquid.
- ⚠ Never let the power cord hang over the edge of a worktop, touch hot surfaces or become knotted, trapped or pinched.

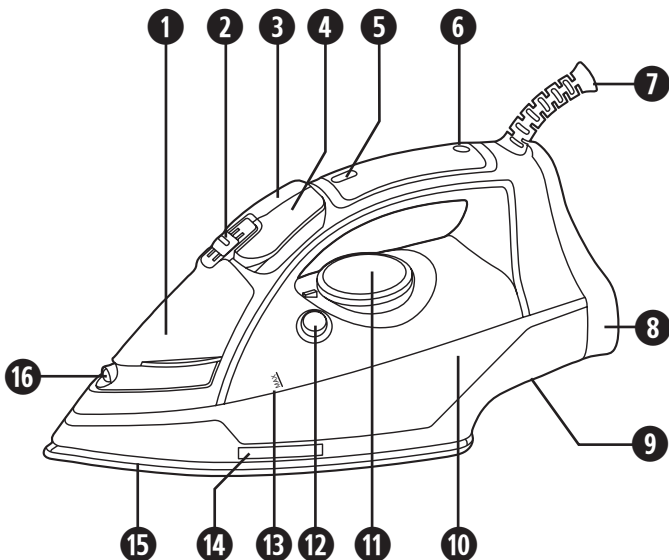

- | | |
|--------------------------------|--------------------------------|
| 1. Water tank inlet cover | 9. Cord wrap |
| 2. Steam control | 10. Water tank |
| 3. Steam burst button | 11. Temperature control |
| 4. Spray button | 12. Self clean button |
| 5. Temperature indicator light | 13. Water level MAX indicator |
| 6. Power indicator light | 14. Safe-Store™ heat indicator |
| 7. Flexible cord protector | 15. Stainless steel soleplate |
| 8. Heel rest | 16. Spray nozzle |

Before using for the first time

⚠ Warning: Remove all packaging including any soleplate protection before using your iron.

Wipe over the soleplate with a cloth moistened with methylated spirit. Wipe off the methylated spirit with a damp cloth then dry the soleplate thoroughly.

Before connecting your iron to the mains supply, make sure your supply voltage is the same as the one indicated on your iron.

When you first use your iron, there may be a slight odour and it may smoke slightly for the first few minutes of operation. This is quite normal and will disappear.

Cleaning your iron before use

Follow these simple steps to remove any impurities or residues inside your steam iron that may be left over from the manufacturing process.

1. Follow the instructions under filling your iron and fill the water tank as described.
2. Empty the water tank to rinse out any foreign particles then refill it.
3. Follow the instructions under steam ironing. Set the temperature to the MAX setting and the steam control to the high steam setting.
4. Iron an old piece of cloth (cotton or towelling is ideal) for a few minutes. While ironing, press the steam button 4 or 5 times.
5. Any impurities will be flushed from your iron by the steam and absorbed by the cloth. Your iron is now ready for use.

Filling your Iron

⚠ Never add fabric conditioner, starches or any other chemicals to the water in your iron.

1. Ensure your iron is switched off and unplugged from the mains supply socket.
2. Set the steam control **2** to the off position (0).

3. Open the water tank inlet cover ❶.
4. Using a jug, fill the water tank with ordinary tap water. To avoid air locks, tilt your iron slightly while filling it.
5. Don't fill the iron above the water level indicator MAX marking. Check the water level by standing the iron on its heel.
6. When the iron is filled, close the water tank inlet cover.

We recommend that you:

- Start by ironing those items of laundry that require the lowest temperature (e.g. synthetics). Finish by ironing fabrics which respond best to higher temperatures and steam—such as cotton and linen.
- If you iron a fabric made of a blend of fibres set the temperature of your iron to the most delicate fibre.
- Never use the burst of steam button on silks or synthetics.
- When using starch, it should be sprayed onto the reverse side of the fabric and the soleplate cleaned more frequently.
- Do not iron over sharp or hard objects such as buttons, studs or zippers as they will scratch the soleplate of your iron.

We recommend that you:

Your iron takes time to heat up and cool down. If you change the temperature setting on your iron, you must give it time to adjust to the new setting.

This is especially important when you change from a high setting to a lower one. It takes your iron longer to cool down than it does to heat up and this is the reason we recommend that you begin ironing at lower temperatures.

If you do need to reduce the temperature of your iron, wait until the temperature indicator light goes out and then comes on again before ironing. This will ensure that your iron has reached the lower temperature and is not too hot for the fabric being ironed.

For example, you have been ironing using the ●●● setting and want to change to the ●● setting:

1. Move the temperature control dial to the ●● setting. Initially, the temperature indicator light will be lit because your iron is still at a higher temperature.
2. Wait until the temperature indicator light goes out and then comes on again. Your iron has now cooled to the correct temperature.

Ironing without steam

If you intend to dry-iron fabrics there is no need to fill the water tank. However, if water is already in the water tank, you don't need to empty it.

1. Set the steam control ❷ to the no steam position (0).
2. Plug your iron into the mains supply and switch on.
3. Rotate the temperature control ❹ until the desired setting is aligned with the dial pointer ❿.
4. When the temperature indicator light ❺ comes on, your iron is ready to use.

Steam ironing


⚠ During steam ironing, if you do not allow your iron to reach the selected temperature water may drip from the soleplate.

It is recommended that for harder to iron fabrics such as cotton and linen, steam should be used when ironing.

When ironing cotton and linen, always select the highest temperature. Steam should never be used on delicate fabrics like nylons, acrylics and synthetics.

1. Fill your iron with water.
2. Plug your iron into the mains supply and switch on.
3. Set the temperature control ❹ to the ●●● setting. The hotter your iron, the more steam is generated.
4. When the temperature indicator light ❺ comes on your iron is ready to use. The

temperature indicator light will turn on and off during ironing as your iron maintains the correct temperature.

- Adjust the steam control **2** to select the desired steam output.
- Move the steam control to the high steam () setting to increase the amount of steam, or towards the off (0) setting to decrease the amount of steam.
- The steam can be shut off at any time by setting the steam control to the off (0) position.

Burst of steam

The temperature control dial must be set within the **●●** and **●●●** setting. Wait several seconds between each press of the steam button.

Press the shot of steam button **3** whenever you have a stubborn crease that needs extra steam. Steam will burst from the holes in the soleplate of your iron into the fabric.

Vertical steam ironing

⚠ Never iron garments when they are being worn.

- Prepare your iron as for steam ironing.
- Hold your iron 15cm from the fabric.
- Press the shot of steam button **3** as required. Wait several seconds between each press of the button.

Spraying

The water spray can be used to help iron heavy fabrics or difficult areas (collars, pockets, sleeves, creases, etc). It can also be used when ironing delicate fabrics which cannot be steam ironed.

Make sure there is water in the tank. Press the spray button **4** to produce a spray of water.

Anti-drip feature

When the temperature of your iron is insufficient to create steam, the supply of water is cut off automatically to avoid any drips from the soleplate.

Anti-scale filter

Your iron is fitted with a permanent anti-scale filter. This filter is fixed and cannot be removed for cleaning.

The filter is designed to reduce the build-up of limescale inside your iron. Limescale occurs during steam ironing due to water hardness.

Water hardness varies from one area to another. The effectiveness of the filter will depend on how 'hard' your water is.

Care and Cleaning

⚠ Warning: Do not use harsh abrasives, chemical cleaners or solvents to clean the exterior of your iron.

Allow your iron to completely cool down and wipe the soleplate with a soft damp cloth. If polyester has burnt to the soleplate, iron a damp cotton cloth while your iron is still hot. Wipe over the rest of your iron with a soft damp cloth then wipe dry.

Self-cleaning

⚠ Only press the self-clean button when you want to activate the self cleaning system. Never press the self-clean button when ironing.

The self-clean function removes scale and impurities. Use the self-clean function once every two weeks. If the water in your area is very hard, the self clean function should be used more frequently.

- Ensure your iron is switched off and unplugged from the mains supply socket.
- Set the steam control **2** to the no steam (0) position.
- Fill your iron with water to the MAX level.
- Stand your iron on its heel rest, plug in and switch on at the mains supply.

5. Set the temperature control **6** to the highest (MAX) setting. Allow your iron to heat up until the temperature indicator light **7** comes on.
6. Unplug your iron and hold it over a sink with the soleplate facing downwards.
7. Press and hold the self-clean button **5**. Hot water and steam will be ejected from the holes in the soleplate along with any impurities.
8. Release the self-clean button after one minute or when the water tank is empty.
9. Stand your iron on its heel rest, plug it in to the mains supply socket and switch on. When the temperature indicator light comes on, iron an old piece of cloth to allow any remaining water to escape.
10. After use, switch off and unplug your iron from the mains supply and allow it to fully cool. Empty out any remaining water.

Cleaning the steam holes

To remove any build-up in or around the steam holes which may affect steam performance, use a cotton wool tip moistened with methylated spirits. Wipe off the methylated spirits with a damp cloth then dry the soleplate.

Cleaning the exterior of your Iron

To clean the exterior of your iron, wipe it with a soft damp cloth and wipe dry.

Storing

⚠ Warning: Allow your iron to completely cool before storing. Always store your iron on its heel rest. Do not store your iron resting on its soleplate.

The Safe-Store™ heat indicator shows you when the soleplate of your iron has cooled sufficiently for it to be safe to store. If the strip is red, your iron is too hot. When the words SAFE-STORE appear on the strip against a solid black background, the soleplate is at a safe temperature for storing.

Never wrap the power cord around the soleplate. The cord can be neatly wrapped around the heel of your iron.

After sales service

To return a faulty appliance to our Customer Service Department:

1. Pack it carefully (preferably in the original carton). Ensure the unit is clean.
2. Enclose your name and address and quote the model number on all correspondence. Give the reason why you are returning it.
3. If within the guarantee period, state when and where it was purchased and include proof of purchase (e.g. till receipt).
4. Send it to our Customer Service Department at the address below:

Customer Service Department
Jarden Consumer Solutions (Europe) Limited
Middleton Road, Royton, Oldham OL2 5LN, UK.
Telephone: 0800 525 089 Fax: 0161 626 0391
e-mail: enquiriesEurope@jardencs.com

Replacement parts

For additional or replacement parts, please visit www.breville.co.uk or call us on **0161 621 6900**.

Troubleshooting

For troubleshooting and FAQs visit www.breville.co.uk/faqs

Turn on your Creativity™

Let the Breville® team help you turn on your creativity with a gateway to a world of food and drinks without limits. You don't have to travel far—just to your computer, tablet or mobile—where you will discover our FREE website with top tips and recipes to inspire your imagination. Join us now at www.turnonyourcreativity.com

Turn  your creativity™

 
Electrical safety

⚠ This appliance must be earthed.

This appliance is fitted with either a moulded or rewirable BS1363, 13 amp plug. The fuse should be rated at 13 amps and be ASTA approved to BS1362. If the fuse in a moulded plug needs to be changed, the fuse cover must be refitted. The appliance must not be used without the fuse cover fitted.

If the plug is unsuitable, it should be dismantled and removed from the supply cord and an appropriate plug fitted as detailed below. If you remove the plug it must not be connected to a 13 amp socket and the plug must be disposed of immediately.

If any other plug is used, a 13 amp fuse must be fitted either in the plug or adaptor or at the distributor board.

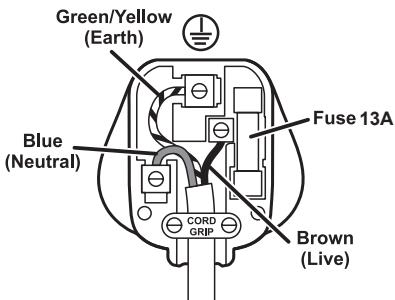

Guarantee

Please keep your receipt as this will be required for any claims under this guarantee.

This appliance is guaranteed for 1 year after your purchase as described in this document.

During this guaranteed period, if in the unlikely event the appliance no longer functions due to a design or manufacturing fault, please take it back to the place of purchase, with your till receipt and a copy of this guarantee.

The rights and benefits under this guarantee are additional to your statutory rights, which are not affected by this guarantee. Only Jarden Consumer Solutions (Europe) Limited ("JCS (Europe)") has the right to change these terms.

JCS (Europe) undertakes within the guarantee period to repair or replace the appliance, or any part of appliance found to be not working properly free of charge provided that:

- you promptly notify the place of purchase or JCS (Europe) of the problem; and
- the appliance has not been altered in any way or subjected to damage, misuse, abuse, repair or alteration by a person other than a person authorised by JCS (Europe).

 
Faults that occur through improper use, damage, abuse, use with incorrect voltage, acts of nature, events beyond the control of JCS (Europe), repair or alteration by a person other than a person authorised by JCS (Europe) or failure to follow instructions for use are not covered by this guarantee. Additionally, normal wear and tear, including, but not limited to, minor discoloration and scratches are not covered by this guarantee.

The rights under this guarantee shall only apply to the original purchaser and shall not extend to commercial or communal use.

If your appliance includes a country-specific guarantee or warranty insert please refer to the terms and conditions of such guarantee or warranty in place of this guarantee or contact your local authorized dealer for more information.

Waste electrical products should not be disposed of with Household waste. Please recycle where facilities exist. E-mail us at enquiries info@pulse-uk.co.uk for further recycling and WEEE information.

Jarden Consumer Solutions (Europe) Limited
5400 Lakeside
Cheadle Royal Business Park
Cheadle
SK8 3GQ
UK

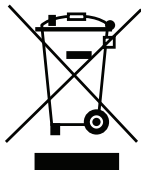



Jarden Consumer Solutions (Europe) Limited
Cheadle Royal Business Park, Cheadle, SK8 3GQ, United Kingdom
e-mail: enquiriesEurope@jardencs.com
Telephone: 0161 621 6900

For Customer Service details, please see the website.

www.breville.co.uk

© 2015 Jarden Consumer Solutions (Europe) Limited

All rights reserved. Imported and distributed by Jarden Consumer Solutions (Europe) Limited,
Cheadle Royal Business Park, Cheadle, SK8 3GQ, United Kingdom.

The product supplied may differ slightly from the one illustrated due to continuing product
development.

Printed in China