

Breville®

Turn **on** your creativity®



Selecta Collection
Temperature Select Kettle

PRODUCT SAFETY

READ CAREFULLY AND KEEP FOR FUTURE REFERENCE

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised. Keep the appliance and its cord out of the reach of children aged less than 8 years.

 
Never use a power base other than the one supplied with the appliance.

Never fill the kettle above the MAX marking. If the kettle is overfilled, boiling water may be ejected.

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

Descale your kettle regularly (see Cleaning Section).

- △ This appliance generates heat during use. Adequate precaution must be taken to prevent the risk of burns, scalds, fires or other damage to persons or property caused by touching the exterior whilst in use or during cooling.
- △ Never use this appliance for anything other than its intended use. This appliance is for household use only. Do not use this appliance outdoors.
- △ Always ensure that hands are dry before handling the plug or switching on the appliance.
- △ Always use the appliance on a stable, secure, dry and level surface.
- △ This appliance must not be placed on or near any potentially hot surfaces (such as a gas or electric hob).
- △ Do not use the appliance if it has been dropped, if there are any visible signs of damage or if it is leaking.
- △ Ensure the appliance is switched off and unplugged from the supply socket after use and before cleaning.
- △ Always allow the appliance to cool before cleaning or storing.
- △ Never immerse any part of the appliance or power cord and plug in water or any other liquid.
- △ Never let the power cord hang over the edge of a worktop, touch hot surfaces or become knotted, trapped or pinched.
- △ Never leave the appliance unattended when in use.
- △ Beware of steam coming from the spout or lid especially during refilling. Never open the lid during the boiling cycle.
- △ Never fill the appliance when it is positioned on the power base.
- △ Never use the kettle without sufficient water in the kettle for it to operate correctly.
- △ Never allow the appliance to boil dry.

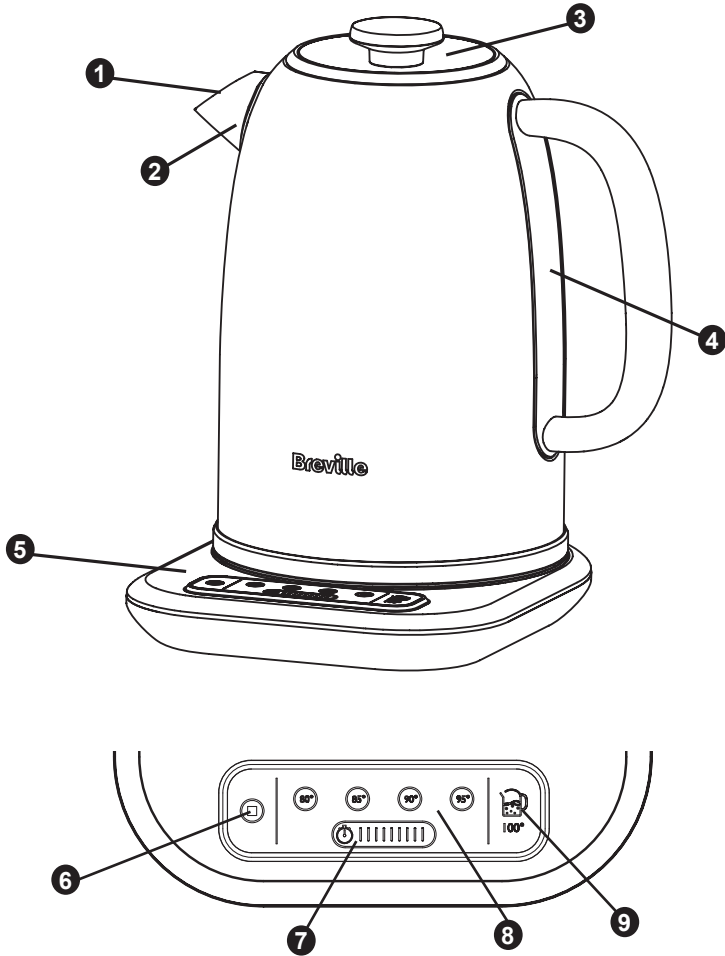

- | | |
|---|-------------------------------|
| 1. Spout | 6. Stop button |
| 2. Filter (behind spout) | 7. Count down timer |
| 3. Pull off lid | 8. Temperature select buttons |
| 4. Water level window | 9. Boil temperature button |
| 5. 360° rotational power base with cord storage | |

BEFORE FIRST USE

Remove any packaging and promotional material from your kettle and position it on a stable, secure, dry and level work surface away from the edge.

Before connecting to a power source, make sure your mains supply voltage is the same as the one indicated on the appliance. Connect the plug to a suitable power outlet and make sure that the power cord does not overhang the work surface. Excess power cord can be stored in the power base.

Remove the kettle from the power base and open the lid. Fill your kettle to the maximum mark and close the lid.

Place your kettle back onto the power base. Switch your kettle on, allow it to boil then discard the water. Repeat twice. This will remove any residue left over from the manufacturing process.

USING YOUR KETTLE

▲ If this kettle is filled above the maximum level mark, hot water may be ejected from the spout during boiling. Beware of steam coming from the spout or lid especially during refilling. Never open the lid when the kettle is boiling.

1. Plug the power base into a suitable power outlet. NOTE: The kettle will turn on and enter stand by mode until one of the buttons on the base unit is pressed.
2. Remove your kettle from the power base before filling it with water.
3. Fill your kettle with water. You can fill it through the spout or by opening the lid. Don't overfill your kettle and always ensure that there is sufficient water in your kettle for it to operate correctly. This is approximately 250ml or 1 teacup full. Always check the water level when your kettle is positioned on its power base.
4. If opened previously, close the lid and place your kettle back on the base.
5. The temperature touch pad on the base

unit of the kettle allows you to select your required temperature of water for the beverage you are making. Choose your desired temperature by touching one of the temperature buttons; the selected temperature will illuminate and heating will start.

6. The countdown timer on the base of the unit will indicate the time left until your kettle reaches the desired temperature. The length of time the water takes to get to temperature will vary depending on the volume of water in the kettle and the temperature selected. NOTE: If the selected temperature is changed during heating the lights and timer on the base unit will automatically adjust themselves. NOTE: Due to the variable way in which heat energy transfers through water the timer lights may not extinguish at a steady rate. This is normal and has no effect on the water temperature.
7. When your kettle is heating, the stop button, water level window and selected temperature will illuminate. NOTE: During heating the temperature of the water will be indicated by the illuminated temperature button. As the temperature increases the buttons will illuminate one by one
8. When the water reaches the selected temperature, your kettle will play a short tune and the illumination will flash to indicate the water is ready. (You have the option to mute the tune feature if you wish)
9. Heating will switch off automatically after reaching temperature, or if the kettle is removed from the base during heating
10. You may also switch your kettle off manually at any time by pressing the stop button again.
11. When the kettle is on the base it will continue to monitor the water temperature after the selected

temperature has been reached. The current water temperature will be indicated on the base unit with a slow pulsing illumination of the temperature button. Once the water temperature drops below 80°C the base unit will enter standby mode

LOWER TEMPERATURE SELECT MODE

You can even set a temperature that is lower than the current temperature while the kettle is cooling, and the kettle will let you know when it is ready! For example, if the kettle has boiled and is indicating 100 degrees you can press (for example) 90 degrees and its light will be permanently on. When the water has cooled to 90 degrees your kettle will play a short tune and the illumination will flash to indicate the water is ready.

ERROR ALERT

If the kettle jug is removed from the base and you attempt to use the base unit the kettle will sound an error tone, and the base unit lights will pulse 3 times. To use the kettle place the jug back onto the base.

MUTE FUNCTION

This function allows you to mute all sounds.

The mute function can be activated by holding down the stop button for 3 seconds. There will be a sound after 3 seconds to confirm the mute setting has been activated.

To deactivate the mute function, hold the stop button for 3 seconds. There will be a sound to confirm the mute setting has been deactivated.

SUGGESTED WATER TEMPERATURES

Beverage	Recommended Temperature
Green Tea	80°C
White Tea	85°C
Oolong Tea	90°C
Black Tea	90°C-100°C
Herbal Teas	90°C-100°C
Instant Coffee	90°C-100°C
Hot Chocolate	90°C-100°C

ENERGY SAVING HINTS AND TIPS

A Breville® kettle, if used correctly, is a very energy efficient device. Why not try some of these energy saving tips:

Only boil the water you need. Overfilling your kettle by one cup is the equivalent to using an energy saving light bulb for one hour!

It is not always necessary to re-boil your kettle. For example, one litre of water will still be at 90°C after five minutes - the perfect temperature for a cup of coffee.

Only heat the water to the temperature required for your chosen beverage.

IF THE KETTLE BOILS DRY

If the kettle is operated with insufficient water a built-in fail-safe device will automatically switch it off.

Unplug your kettle and allow it to cool. When it has cooled down sufficiently the safety device will reset itself.

CLEANING

▲ Always unplug the kettle from the mains supply socket and allow it to completely cool down before cleaning or descaling it. Do not immerse the kettle, power base or power cord and plug in water or any other liquid.

1. Clean the exterior surface of the kettle with a damp cloth and then polish with a soft dry cloth. Do not use steel wool pads or harsh/abrasive cleaners.
2. Descale your kettle regularly to keep it working efficiently. Use a proprietary descaling product following the manufacturer's instructions carefully.

CLEANING THE FILTER

▲ Before removing or refitting the filter, switch off the kettle and empty it. Allow it to cool completely, then unplug the power base from the mains supply socket. Never operate the kettle without the filter fitted.

- Open the lid and remove the filter from behind the spout.
- Rinse the filter under a tap whilst brushing it with a soft brush.
- In hard water areas it may be necessary to descale the filter using a descaling product. Use a proprietary descaling product following the manufacturer's instructions carefully.
- The filter may be washed safely in the cutlery rack of a dishwasher.
- Refit the filter back into your kettle.

TROUBLESHOOTING

For troubleshooting and FAQs visit:
www.breville.co.uk/faqs

ELECTRICAL SAFETY

 
▲ This appliance must be earthed.

If the plug is not suitable for the socket outlets in your home, it can be removed and replaced by a plug of the correct type.

If the fuse in a moulded plug needs to be changed, the fuse cover must be refitted. The appliance must not be used without the fuse cover fitted.

If the plug is unsuitable, it should be dismantled and removed from the supply cord and an appropriate plug fitted as detailed. If you remove the plug it must not be connected to a 13 amp socket and the plug must be disposed of immediately.

If the plug fuse requires replacement, a fuse of the same rating as that fitted by the manufacturer must be used. In order to prevent a hazard do not fit a fuse of a lower or higher rating.

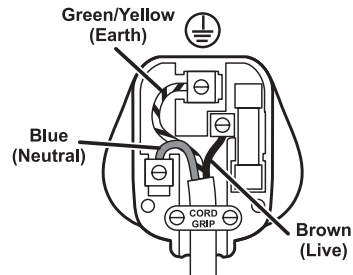


Ensure that the outer sheath of the cable is firmly held by the clamp

AFTER SALES SERVICE & REPLACEMENT PARTS

In the case the appliance does not operate but is under warranty, return the product to the place it was purchased for a replacement. Please be aware that a valid form of proof of purchase will be required. For additional support, please contact our Consumer Service Department at 0800 028 7154 or email: BrevilleEurope@newellco.com.

WASTE DISPOSAL

 Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. E-mail us at BrevilleEurope@newellco.com for further recycling and WEEE information.

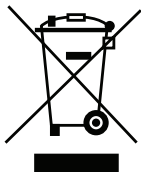

Breville®

Jarden Consumer Solutions (Europe) Limited
5400 Lakeside, Cheadle Royal Business Park,
Cheadle, SK8 3GQ, United Kingdom
Newell Poland Services Sp. z o.o.,
Plac Andersa 7, Poznan, 61-894, Poland.
e-mail: BrevilleEurope@newellco.com
UK Telephone: 0800 028 7154



© 2020 Jarden Consumer Solutions (Europe) Limited. All rights reserved.

Jarden Consumer Solutions (Europe) Limited, 5400 Lakeside, Cheadle Royal Business Park, Cheadle, Cheshire, SK8 3GQ, United Kingdom.
Newell Poland Services Sp. z o.o., Plac Andersa 7, Poznan, 61-894, Poland.

Jarden Consumer Solutions (Europe) Limited and Newell Poland Services Sp. z o.o. are subsidiaries of Newell Brands Inc.

The product you buy may differ slightly from the one shown on this carton due to continuing product development.

Made in China.