

Breville®

Turn **on** your creativity®



CompactSteam Handheld Garment Steamer

VIN430

Important Safety Information

READ CAREFULLY AND KEEP FOR FUTURE REFERENCE

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

Keep the appliance and its cord out of reach of children less than 8 years old when it is switched on or cooling down.

The appliance must not be left unattended when it is connected to the mains supply.

The appliance must be unplugged from the mains supply socket before filling the water tank with water. Always use the appliance on a stable, secure, dry and level surface. When placing the appliance on its stand, ensure that the surface on which the stand is placed is stable.


Do not use the appliance if it has been dropped, if there are any visible signs of damage or if it is leaking. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

Never use this appliance for anything other than its intended use. This appliance is for household use only. Do not use this appliance outdoors.

- ⚠ Always ensure that hands are dry before handling the plug or switching on the appliance.
- ⚠ Do not touch the metal parts of the appliance during use as they may become very hot.
- ⚠ This appliance must not be placed on or near any potentially hot surfaces (such as a gas or electric hob).
- ⚠ Always allow the appliance to cool before cleaning or storing.
- ⚠ Never immerse any part of the appliance or power cord and plug in water or any other liquid.
- ⚠ Do not reach for an appliance that has fallen into water. Unplug immediately.
- ⚠ Use only in a dry area.
- ⚠ Never let the power cord hang over the edge of a worktop, touch hot surfaces or become knotted, trapped or pinched.
- ⚠ Do not use an extension cord to operate the appliance.

- ⚠ Never drop or insert any object into any opening.
- ⚠ Do not place the steam nozzle directly on any surface or on the appliance power cord while it is hot or plugged in.
- ⚠ Always position the handheld garment steamer with the steam plate away from you and others when turning on the appliance and emitting steam.
- ⚠ Unplug this appliance before filling or emptying the water reservoir.
- ⚠ Use caution when installing or removing an attachment. It may contain hot water from condensation. Ensure that the unit is «OFF» (O) and the attachment is dry or cool to avoid contact with hot water.
- ⚠ Never steam clothes you, or someone else, are wearing.
- ⚠ Take care not to pinch or trap hands, fingers or the power cable when folding the head of the handheld garment steamer.

Parts

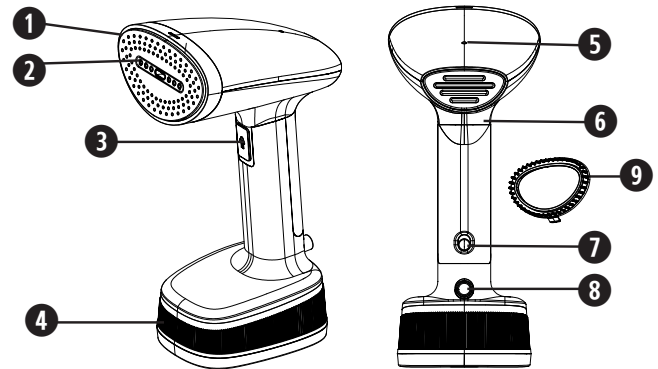

1. Stainless steel press plate
2. Steam nozzle
3. Steam button
4. Detachable water reservoir
5. Power indicator / Pre-heating indicator
6. Folding hinge
7. Power button «ON» (I) - «OFF» (O)
8. 3m power cord
9. Fabric brush attachment
10. Travel pouch (not shown)
11. 80ml filling cup (not shown)

Before using for the first time

▲ Warning: Remove all packaging including any press plate protection before using your handheld garment steamer.

Before connecting your handheld garment steamer to the mains supply, make sure your supply voltage is the same as the one indicated on your appliance.

When you first use your handheld garment steamer, there may be a slight odour and it may smoke slightly for the first few minutes of operation. This is quite normal and will disappear.

What water to use?


Your appliance has been designed to use tap water. If your water is very hard, mix 50% tap water and 50% bottled demineralised water.

▲ Warning: Never add fabric conditioner, starches or any other chemicals to the water in your handheld garment steamer.

Priming your handheld garment steamer before use

▲ Warning: Always unfold the steam head until it is locked before any use of the appliance.

Follow these simple steps to remove any impurities or residues inside your handheld garment steamer that may be left over from the manufacturing process.

1. Follow the instructions under 'Filling instructions' and fill the water reservoir as described.
2. Empty the reservoir to rinse out any foreign particles then refill it.
3. Press and hold the steam button  to release continuous steam.
4. Steam an old piece of cloth (cotton or towelling is ideal) for a few minutes.
5. Any impurities will be flushed from your handheld garment steamer by the steam and absorbed by the cloth. Your handheld garment steamer is now ready for use.



Filling instructions

1. Make sure the unit is unplugged.
2. Grasp the handle and rotate the water reservoir to detach from handheld garment steamer.
3. The fill inlet is located on the top of the reservoir.
4. Remove the rubber inlet cover and fill the reservoir.
5. Close the inlet cover and wipe off any water on the reservoir surface.
6. Return the reservoir to the handheld garment steamer, making sure that it snaps securely into place.

Operating instructions

▲ Warning: Never use steam on silks or synthetics.

Note: Before first use or if the handheld garment steamer has not been used for a long period of time, it will be necessary to prime the appliance. See 'Cleaning your handheld garment steamer before use' for instructions.

1. Follow the 'Filling instructions' in the section above.
2. Plug the unit into the electrical mains outlet.
3. Slide the «ON» (I) - «OFF» (O) button up to turn the handheld garment steamer «ON» (I).
4. The power indicator will not illuminate whilst the unit pre-heats.
5. Allow the handheld garment steamer to warm up. This can take up to 40 seconds.
Warning: Pressing the steam button before the appliance has finished pre-heating may cause leaking from the press plate.
Note: You may hear a tapping noise during the heat-up cycle. This is normal.
6. When the power indicator light switches on, the appliance is ready to use.
7. Hold the handheld garment steamer in a vertical position with the steam nozzle away from you and others. Press and hold the steam button  to release continuous steam.
8. To stop continuous steam, release the steam button .

9. To switch off the handheld garment steamer, slide the «ON» (I) - «OFF» (O) button down.
10. Unplug the device when not in use. Empty the reservoir and allow the handheld garment steamer to cool down before storing.
11. For storage purposes or to place in the travel pouch, it is possible to fold the appliance. Push the head down towards the handle to fold.

▲ Warning: Allow the appliance to completely cool down before folding for storage. Take care not to pinch or trap hands, fingers or the power cable when folding the head of the handheld garment steamer.

Accessories

Your handheld garment steamer comes with a fabric brush and travel pouch.

- i. The fabric brush separates the fibres on thicker fabrics for better steam penetration. To affix the attachment, snap the fabric brush over the press plate.
- ii. The travel pouch is used to store your appliance or to travel with. Before using the travel pouch, unplug your appliance and allow it to cool down for one hour. Then empty the water tank before storing it.


▲ Make sure the handheld garment steamer is unplugged and cool before applying attachments. If the unit has been in use, allow the unit to cool down completely first before changing attachments as the press plate will still be hot.

Descaling instructions

▲ Warning: Do not use harsh abrasives, chemical cleaners or solvents to descale of your handheld garment steamer.

▲ Warning: We advise you do this operation in a vented room.

If you notice a decrease in the performance of your appliance, it may need descaling. Descaling helps to remove scale and impurities to prolong the life of your appliance. If the water in your area is very hard, the descaling should be performed more frequently. Do this process in a well-ventilated room.

1. Remove the water reservoir.
2. Remove the rubber inlet cover.
3. Fill the reservoir with 50% untreated tap water and 50% white vinegar.
4. Close the inlet cover and wipe off any water on the reservoir surface.
5. Return the reservoir to the handheld garment steamer, making sure that it snaps securely into place.
6. Plug the unit into the electrical mains outlet.
7. Slide the «ON» (I) - «OFF» (O) button up to turn the handheld garment steamer «ON» (I).
8. The power indicator will not illuminate whilst the unit pre-heats.
9. Allow the handheld garment steamer to warm up. This can take up to 40 seconds.
10. When the power indicator light switches on, the appliance is ready to use.
11. Stand the handheld garment steamer on its base on a flat, stable and heat-resistant surface.
12. Position the steam nozzle away from you and others.
13. Press and hold the steam button  to release steam.
14. Allow the appliance to run until the water tank is completely emptied.
15. Slide the «ON» (I) - «OFF» (O) button down to turn the handheld garment steamer «OFF» (O).
16. Unplug the appliance and refill the reservoir with 100% untreated tap water and repeat the previous operation until the water tank is completely empty in order to rinse your appliance.


Care & cleaning

⚠ Warning: Do not use harsh abrasives, chemical cleaners or solvents to clean the exterior of your handheld garment steamer. Do not immerse the appliance or power cord and plug in water or any other liquid.

Allow your handheld garment steamer to completely cool down and wipe the press plate and exterior with a soft damp cloth. Wipe dry before storing.

After sales service and replacement parts

In the case the appliance does not operate but is under warranty, return the product to the place it was purchased for a replacement. Please be aware that a valid form of proof of purchase will be required. For additional support, please contact our Consumer Service Department at **0800 028 7154** or email: **BrevilleEurope@newellco.com**.

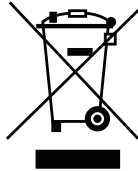

Troubleshooting

For troubleshooting and FAQs visit www.breville.co.uk/faqs.

Problems	Possible Causes	Solutions
There is no steam.	The appliance is not plugged in, or not switched on.	Check that your appliance is correctly plugged in and switched on.
	The appliance is pre-heating.	Once the appliance is plugged in and switched on, wait approximately 40 seconds for steam to be available.
	The water level is too low.	Unplug your appliance and refill it.
	The steam pump has not been primed.	Refer to the ' Priming your handheld garment steamer before use ' section.
	You are using the appliance for the first time.	Refer to the ' Priming your handheld garment steamer before use ' section.
	The water tank is not fully in place.	Ensure that the fill inlet cover is closed and that the water tank snaps when put into place.
	Steam trigger cannot be pressed.	Completely unfold the steam head until locked to allow the steam trigger to be pressed.
There is noise emitting from the appliance.	The water level is too low and the pump is pulling air.	Unplug your appliance and refill it.
	The appliance is heating up.	This is normal when the appliance is heating up.

Problems	Possible Causes	Solutions
The appliance does not heat.	The appliance is not plugged in, or not switched on.	Check that your appliance is correctly plugged in and switched on.
Water tank leaks.	The water tank is not fully in place or the fill inlet cover is not closed properly.	Ensure that the fill inlet cover is closed and that the water tank snaps when put into place.
Water leaks from the steam head.	The appliance is in a tilted position.	Gently return to an upright position.
	The appliance is not completely unfolded and locked.	Ensure the appliance is completely unfolded and locked.
	The steam button has been pressed before appliance has finished pre-heating.	Wait approximately 40 seconds for the appliance to heat up. When the power indicator switches on, the appliance is ready to use.
Steam rate decreases.	Calc build up.	Refer to the ' Descaling instructions ' section.
The steam leaves stains on the fabric or the appliance spits.	You are using water with additives.	Never add any additive in the water tank.
	The appliance has not been cleaned enough after the descaling operation.	Refer to the ' Descaling instructions ' section.
	You are using other liquids than white vinegar to descale the product.	Use only white vinegar during descaling operation.

Electrical safety


⚠ This appliance must be earthed.

If the plug is not suitable for the socket outlets in your home, it can be removed and replaced by a plug of the correct type.

If the fuse in a moulded plug needs to be changed, the fuse cover must be refitted. The appliance must not be used without the fuse cover fitted.

If the plug fuse requires replacement, a fuse of the same rating as that fitted by the manufacturer must be used. In order to prevent a hazard do not fit a fuse of a lower or higher rating.

If the terminals in the plug are not marked or if you are unsure about the installation of the plug please contact a qualified electrician.

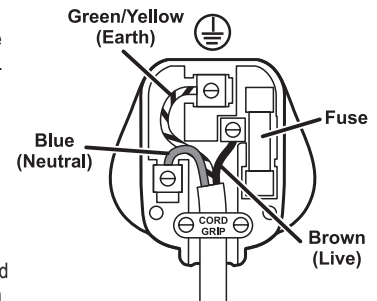

Waste disposal

Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. E-mail us at BrevilleEurope@newellco.com for further recycling and WEEE information.



Breville®

Jarden Consumer Solutions (Europe) Limited
5400 Lakeside, Cheadle Royal Business Park,
Cheadle, SK8 3GQ, United Kingdom

Newell Poland Services Sp. z o.o.,
Plac Andersa 7, Poznan, 61-894, Poland.

e-mail: BrevilleEurope@newellco.com

Telephone: 0800 028 7154



CE UK
CA

© 2022 Jarden Consumer Solutions (Europe) Limited. All rights reserved.

Jarden Consumer Solutions (Europe) Limited, 5400 Lakeside, Cheadle Royal Business Park,
Cheadle, Cheshire, SK8 3GQ, United Kingdom.

Newell Poland Services Sp. z o.o., Plac Andersa 7, Poznan, 61-894, Poland.

Jarden Consumer Solutions (Europe) Limited and Newell Poland Services Sp. z o.o. are
subsidiaries of Newell Brands Inc.

The product you buy may differ slightly from the one shown on this carton due to continuing
product development.

Made in China.

VIN430_21EM2 (UK)

GCDS-BRE1702477-LD
P.N. ART0000915334 Rev A

